



aquatone

PADDLE IN STYLE | [AQUATONE.COM](https://aquatone.com)

EN

GLACIER

INFLATABLE HIGH PRESSURE KAYAK

USER GUIDE

< WELCOME >

Thank you for choosing aquatone products. Our team is proud to offer you a quality product with strict quality standards. We hope you thoroughly enjoy this product. Please take time to read the content in this user guide.

We wish years of enjoyment and rewarding experience with your aquatone product.

< INDEX >

2. Info and Hall Identification Number (HIN)
3. Release of Liability
4. Safety Precautions
5. Your New Kayak
6. Preparation for Installation
7. Inflate the Kayak
8. Seat Installation
9. Seat, Fin and Paddle Set-up
10. Deflation and Packaging
11. Care, Maintenance&Storage
12. How to Repair
13. Warranty Info
14. Warranty Registration Card
15. Notes

< IMPORTANT INFORMATION >

Model:	
Date of Purchase:	
Dealer Name:	
Province/State:	
Country:	
Item No:	
HIN No:	

< IMPORTANT >

Paddling sports can be dangerous and physically demanding, Aquatone is not liable for accidents or injuries due to improper use of the product, failure to adhere to the instructions given in this guide, or modifications to the product.

To avoid serious injury or death, follow the safety information in this User Manual. When using the kayak, you are personally responsible to determine if you have the required skills level to handle the different water and wind conditions. You should use your best judgements as to when and where to use this product.

For your safety and greater enjoyment, we strongly recommend kayak or related lessons for first-time kayak users. Paddling sports is a dangerous activity and should be treated with caution.

Before using the product, read the enclosed instructions and keep them throughout the lifetime of the product.

When every effort is made to ensure that the information contained in the guide is accurate and complete. Aquatone is not liable for any errors or omissions.

This Kayak is not a toy. 12 years of age or younger. Youth of ages 13 to 17 should only use the product under the direct supervision of an adult. An adult should review and explain full set of instructions in this guide with the youth (age 13 and over) before going kayaking.

< RELEASE OF LIABILITY >

By assembly or using this Aquatone product, you agree that you have read and understood this entire aquatone User Manual including all instructions and warning contained in the Manual and all printed warnings before using this aquatone product in any way. Also, you agree that you will ensure any additional or subsequent users of this Aquatone product read and understand this entire User Manual, including all instructions and warnings contained in the Manual and all printed warning before permitting that person to use this kayak.

ASSUMPTION OF RISKS:

Paddling sports is a dangerous activity, and the use of any Aquatone product involves inherent risks and dangers that may result in serious injury and death of both the users and others. In using this Aquatone product and an of its component, you freely agree to assume and accept any known and unknown risks of injury to you and nonuser third parties when using this equipment. The risk, danger and hazards of kayaking and paddling sports can be significantly reduced by adhering to instruction and warning contained in this User Manual and by using common sense.

< SAFETY PRECAUTIONS >

Read this User Manual and follow the safety instructions for correct and complete assembly of the product, commissioning, use and maintenance. For your safety, always read the warnings and cautions contained in these instructions. Failure to follow these instructions may result in serious or even fatal hazards.

WARNING

A **WARNING** indicates a hazardous situation which, if not avoided, could result in death or serious injury.

- Use this product only at the locations and under the conditions for which it is intended.
- Always wear an approval personal floatation device (PDF). Safety devices must be checked before each use.
- Obtain training in the safe use of the kayak from a qualified instructor and build your experience in controlled situation.
- Never paddle alone.
- Do not go into water if you are under the influence of alcohol, drugs, or medication as it may affect your conditions, judgement, or ability to safely and securely operate your kayak .
- Do not exceed your paddling ability.
- Do not exceed the product's maximum load capacity which includes the weight of the passenger and onboard equipment.
- An irregular load distribution on the kayak can cause an imbalance, capsize and so a risk of drowning.
- Bad weather and sea conditions can be extremely dangerous. Check weather before you set off.

WARNING


- Avoid contact of inner tubes with sharp objects
- Inflate to standard pressure indicated on the product under risk of over-inflation and/or explosion. Never unscrew the valve when the kayak is inflated to avoid any risk of rapid ejection of the valve

CAUTION


A **CAUTION** indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

- Check your equipment prior to each use of signs of wear of failure.
- Always carry identification.
- Tell your partner about your itinerary and schedule.
- Dress accordingly for weather conditions: cold weather and/or water can cause hypothermia.
- Wear appropriate clothing including helmet, shoes, sun protection etc.
- Take food and water with you.
- Take paddles with safety strap and tow ropes. If possible, take a mobile phone in a waterproof case
- In the United States, always use a personal. floatation device approved by the US Coast Guard.
- Find out about local regulations and the dangers of kayaking and boating and/or other aquatic activities.

HULL IDENTIFICATION NUMBER (HIN):

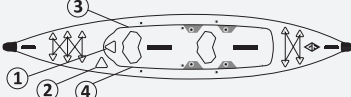 aquatone		MODEL: TK-600 / TK-601	
HIN CN-AQT		EN ISO 6185-1 CAT III type 3B aquatone MADE IN CHINA	
PAYLOAD TK-600		TK-601	
 REC. 108 KG / 240 LBS MAX. 145 KG / 319 LBS		 REC. 226 KG / 500 LBS MAX. 249 KG / 550 LBS	
			
 ① ② = REC. PRESSURE 10PSI ③ ④ = MAX. PRESSURE 15PSI			

< YOUR NEW KAYAK >

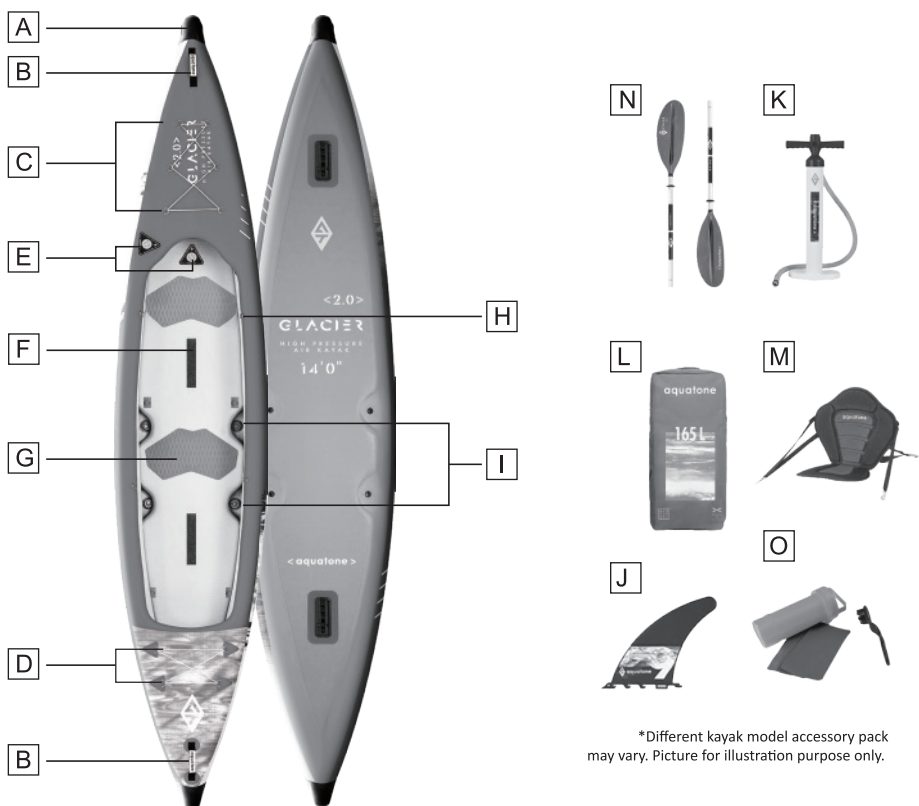

*Different kayak model accessory pack may vary. Picture for illustration purpose only.

A	Anti-collision protector	I	Bailing valves
B	Heavy duty grab handles	J	Push-in tracking fins x 2
C	6-Point cargo bungee cord system at front	K	Double action hand pump
D	4-Point cargo bungee cord system at rear front	L	165L kayak gear bag
E	High pressure inflation valves on floor deck, side tubes and top deck	M	Kayak Seat (TK-600 x 1; TK-601 x 2)
F	Velcro straps for securing kayak seats	N	PULSE aluminum kayak paddle (4-section)
G	Anti-slippery foam traction pads	O	Repair kit
H	D-rings for seat and footrest connection		

< PREPARATION FOR INSTALLATION >

Unfold The Kayak

Arrange the kayak flat on a clean surface, without any objects that could damage the inflatable structure.

Check and Identify the Inflation Valves

Identify the inflation valves required to inflate the kayak and understand their mode of operation. Ensure that the valves are in the Closed Position (A).


Closed Position (A)

The spring is released, the valve is closed, connect the pump tip to inflate.

Open Position (B)

The spring is depressed, the valve is open, the air escapes the kayak deflates.

Check the high-pressure valve and make sure it's completely tightened before use.

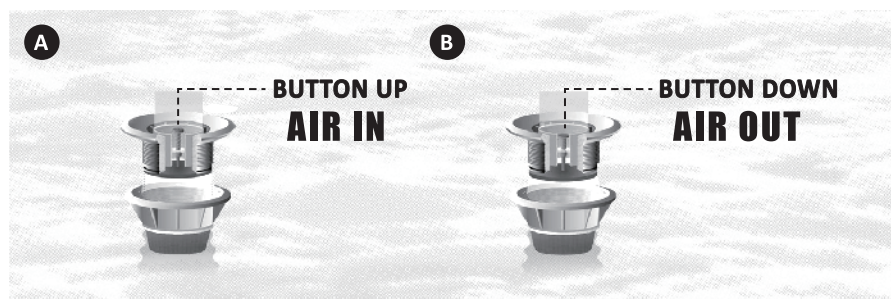

How to Use the Hand Pump?



Connect the hose to the INFLATE section to inflate.




The aquatone Pump is a **Double Action Pump**. Pump the kayak with the Air Screw closed for double stroke action and take the Air Screw out when the double stroke gets too exhausting.



On top of the pump is a **Pressure Gauge**. The **Recommend Pressure for this product is 10PSI/ BAR**. Do not over inflate the product, this will void your warranty.


< INFLATE THE KAYAK >

Connect the Aquatone hand pump and inflation hose to the valves on the Kayak. Close the cap when inflation is complete.

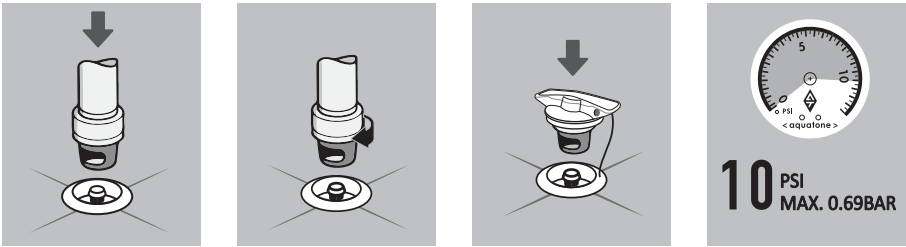





Inflate the main volume (1-Bottom Floor Deck), then the intermediate volumes (2-Side Walls), then the small volumes (3-Top arches). This will make the inflation much easier. All volumes are inflated to Recommend Pressure at 10PSI.

WARNING: Do NOT over inflate, this will damage the kayak and void your warranty.

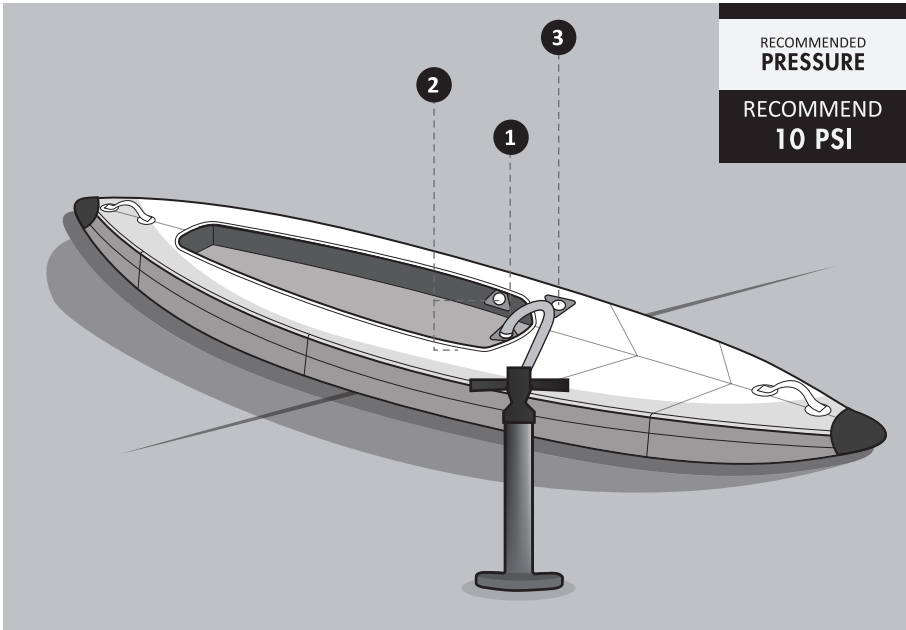




< SEAT INSTALLATION >

ATTACH the Kayak Seat(s) to the attachments on the side walls. Secure the seat(s) to the floor deck with Velcro tapes.

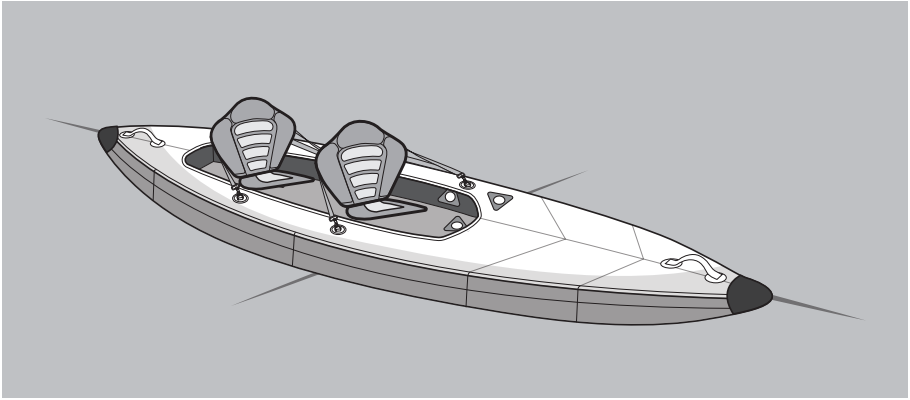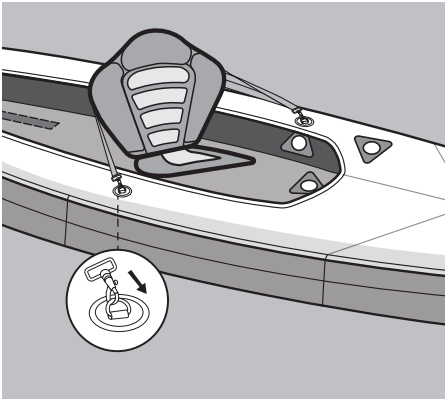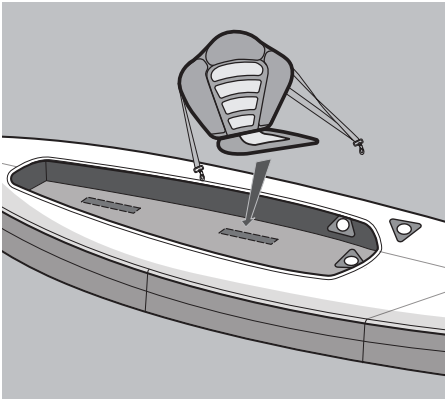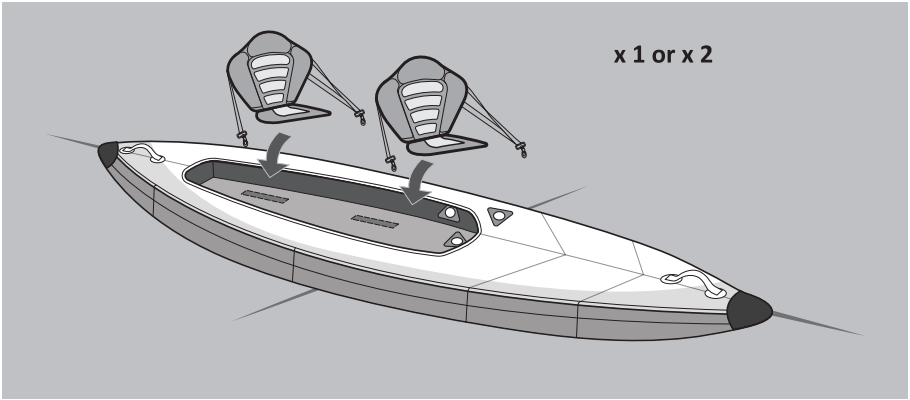

< **FIN INSTALLATION** >



Flip your kayak over and slide the slot from the left to the right all the way. With the tip facing the tail of the kayak, slide into place. Make sure the fin is secured. Push the slot in until you hear a click.

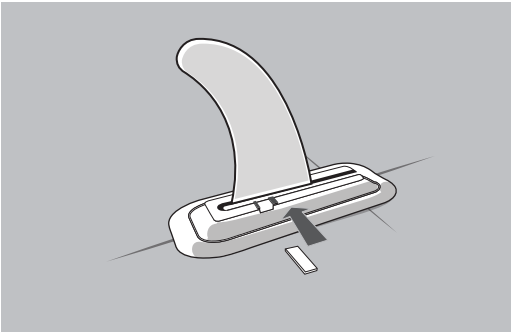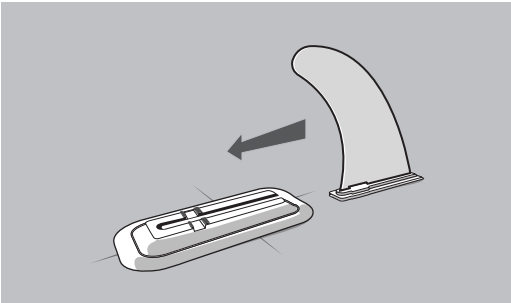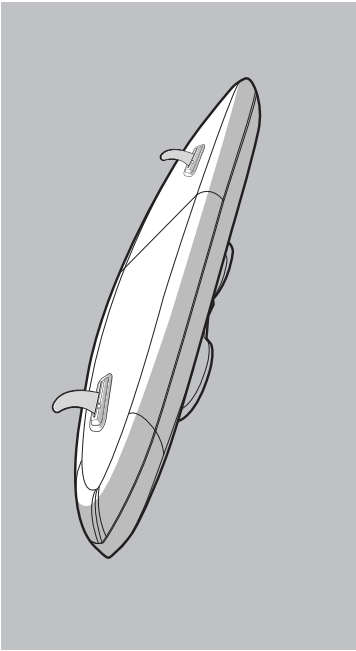

< **PADDLE INSTALLATION** >

Locate 4 total sections for the PULSE Aluminum Double Blade Paddle. Each middle section connects to a paddle piece.

Connect each middle section to the paddle section by pushing down the pin. Push down the middle pin to align both sections.

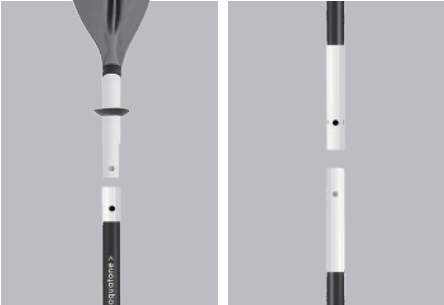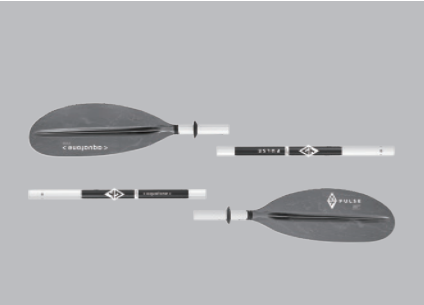

< DEFLATION AND PACKAGING >



Remove any water or debris out of the valve area before deflation.







Slowly press down the valve pin to start letting air out. There will be an initial burst of air, but that will slow down very quickly. Once the air flow has slowed down, press the pin all the way down and turn it clockwise to lock it onto the "OPEN" position.






To deflate the kayak completely, input hose into the deflate option and pump the air out.

< HOW TO FOLD AND PACK >

Remove all the accessories from the kayak. Take out the air deck before folding. Deflate the side tubes by pressing the plunger of each valve. Fold the kayak in the middle following the following steps.

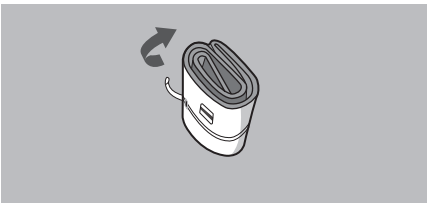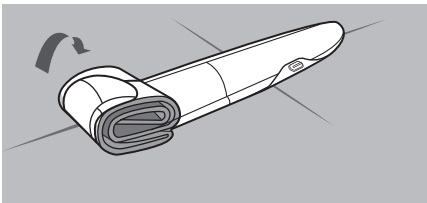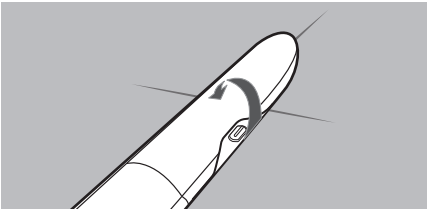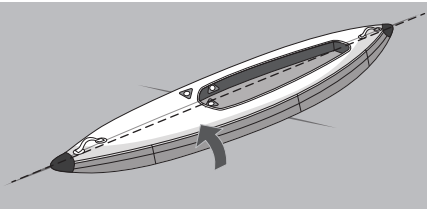

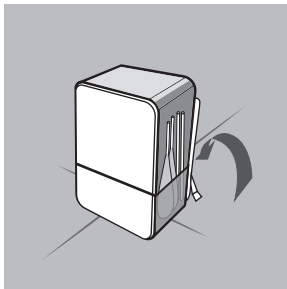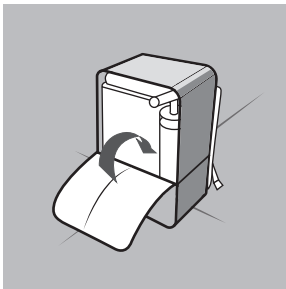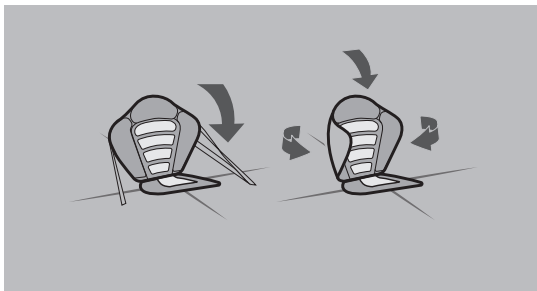





< CARE, MAINTENANCE & STORAGE >

- Open the drain plugs located in the middle of the kayak and at back. Tilt the kayak to empty the water.
- Rinse the kayak, bottom and seats with clean water or mild soap after each use to avoid damage from sand, sun and salt water. Do not use harsh chemicals to clean.
- Wipe the inside and outside of the kayak and the seats and bottom with a sponge or towel.
- Inspect your Kayak for abrasion before and after each use.
- Do not drag the kayak along the floor as this could result to wearing puncture in the material and will ultimately cause leakage.
- Store in a cool, clean and dry area after use.
- Do not store your kayak in extreme temperature conditions (e.g., above 50°C/122°F or below 0°C/32°F).

< HOW TO REPAIR ? >

1. LEAK AROUND THE VALVE

- Deflate the kayak completely.
- Firmly grab the inner part of the valve through the lower layer of the wall.
- Insert the wrench into the outer part of the valve (wrench is supplied in the Repair Kit).
- Rotate the wrench clockwise until the valve is completely tightened.



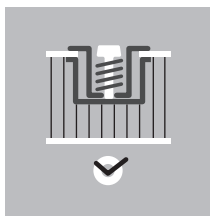
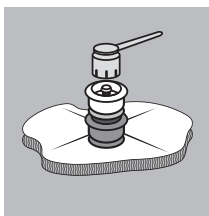
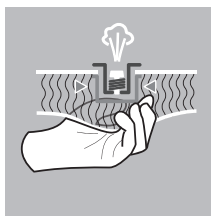
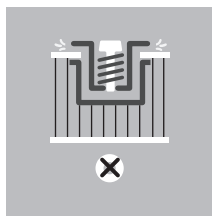


2. LEAK IN THE MIDDLE OF THE VALVE

Deflate the kayak completely. The valve body is probably broken in which case please go to a aquatone Local Dealer to have it replaced or repaired.

3. PUNCTURE ON THE KAYAK'S SURFACE OR TUBES

- Locate the leak. Deflate the kayak completely.
- Clean and dry the area to be repaired with a cloth.
- Choose a piece of repair matter in side your Repair Kit provided with the kayak.
- Cut out a piece of fabric according to the area to be repaired.
- Apply a glue for "Soft PVC".
- Hold the patch firmly in place for 30 seconds. A weight can help compress the patch.
- Allow 12 hours of drying time before re-inflating the kayak and check that the leak has been repaired properly.

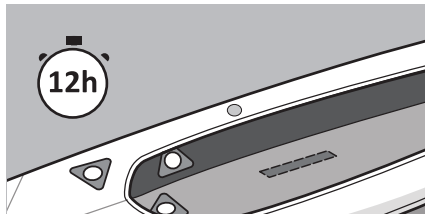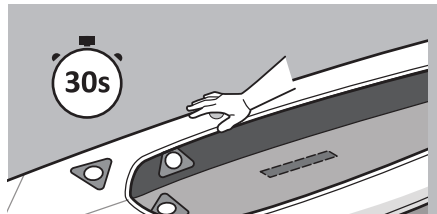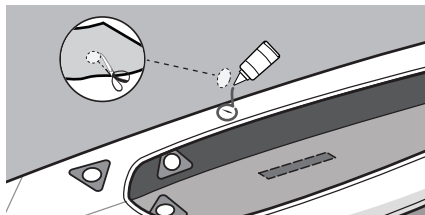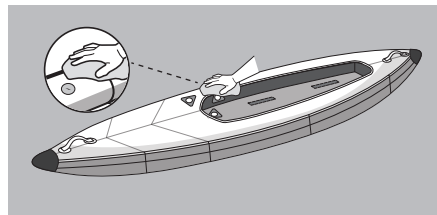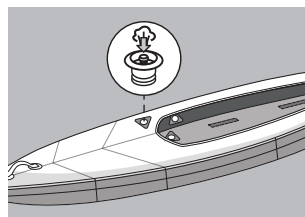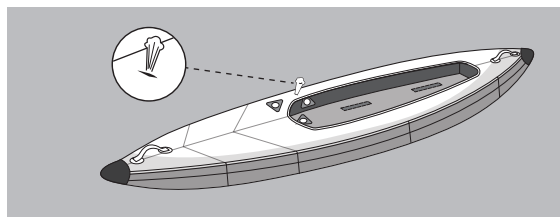

NOTICE:

For logistical reasons, the glue is not provided and needs to be sold separately. The repair must be done in a clean place, protected from rain and sun. Contact with eyes, mouth or skin should be avoided. Keep repair equipment out of reach of children.

WARRANTY

**1
YEAR**

aquatone warrants this product to be free from major defects in material or workmanship to the original purchaser for a period of ONE (1) YEAR from the date of purchase.

This warranty is subject to the following limitations.

1. The warranty is valid only when the warranty card is completed and returned within 30 days of date of purchase.
2. The warranty is valid only when this product is used for normal recreational paddling activities and does not cover products used in rental or school operations.
3. Aquatone will make the final warranty determination, which will require inspection and/or photo of the boat, which clearly show the defect(s). Please return the complete Aquatone kayak package with prepaid postage to the retailer you purchased from and follow their return instructions.
4. If a product is deemed to be defective by aquatone, the warranty covers the repair or replacement of the defective product only. Aquatone will not be responsible for any costs, losses, or damage incurred as a result of loss or misuse of the product.
5. This warranty does not cover damage caused by misuse, abuse, neglect; normal wear and tear including, but not limited to, punctures, damage due to excessive heat exposure, damage caused by improper handling and storage, damage caused by use in waves or shore break or damage caused by anything other than defects in material and workmanship.
6. This product must not be modified and/or fitted with a motor.
7. This product must not be used in excess of the manufactures recommended maximum load capacity.
8. This warranty is void if any unauthorized repair, change or modification has been made to any part of the equipment.
9. This warranty for any repaired or replacement equipment is good from the date of the original purchase only.

10. The original purchase receipt must accompany all warranty claims. The name of the retailer and date of purchase must be clear and legible.
11. There are no warranties that extend beyond the warranty specified here in.
12. Register your kayak by sending the warranty card located below to your seller or electronically via our website at www.aquatone.com.



WARRANTY REGISTRATION CARD

Date of Purchase: _____ Model: _____

HIN Number: _____

Dealer/Store Name: _____ Dealer/Store Address: _____

State/Province: _____ Zip/Postal Code: _____

Country: _____ Mr. ☐ Mrs. ☐ Ms. ☐

Surname: _____ Name: _____

Address: _____

State/Province: _____ Zip/Postal Code: _____

Country: _____

Telephone Number: () _____

Email: _____

NOTES

[illegible]



PADDLE IN STYLE | WWW.AQUATONE.COM

An aerial, black and white photograph showing two people in a tandem kayak on a body of water. The kayak is moving towards the bottom of the frame, leaving a prominent, swirling wake behind it. The water's surface is textured with ripples and small waves.

AZTRON SPORTS (SHANGHAI) CO.,LTD